

INTRODUCTION

AKSA POWER GENERATION

Aksa power generation system, providing optimum performance, and reliability, for stationary standby, prime power, and continuous duty applications. All generator sets are factory build, and production tested.

Power (kVA)3 Phase,50 Hz, PF				3 Phase,50 Hz, PF 0.8	
VOLTAGE	STANDBY RATING (ESP)		PRIME RATING (PRP)		Standby Amper
VOLTAGE	kW	kVA	kW	kVA	
400/231	572,00	715,00	520,00	650,00	1032,04

STANDBY RATING (ESP) Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utility source. ESP is in accordance with ISO 8528-1. Overload is not allowed.

PRIME RATING (PRP) Applicable for supplying power to varying electrical load for unlimited hours. PRP is in accordance with ISO 8528-1. 10 % overload capability is available for a period of 1 hour within 12-hour period of operation.

General Characteristics

Model Name		APD 715 BD
Frequency (Hz)		50
Fuel Type		Diesel
Engine Made and M	lodel	BAUDOUIN 6M33G715/5
Alternator Made and	d Model	AK 6520
Control Panel Mode	l	DSE 7320
Canopy		MS 80

ENGINE SPECIFICATIONS

ENGINE SPECIFICATIONS	
Engine	BAUDOUIN
Engine Model	6M33G715/5
Number of Cylinder (L)	6 cylinders - in line
Bore (mm.)	150
Stroke (mm.)	185
Displacement (It.)	19.6
Aspiration	Turbo Charged and Air to Air AfterCooled
Compression Ratio	15:1
RPM (d/dk)	1500
Oil Capacity (Total With Filter) (It)	64
Standby Power (kW/HP)	633/849
Prime Power	575/711
Block Heater QTY	1
Block Heater Power (Watt)	3000
Fuel Type	Diesel
Injection Type and System	Direct
Type of Fuel Pump	Mechanical
Governor System	Electronic
Operating Voltage (Vdc)	24 Vdc

AKSA POWER GENERATION

Battery and Capacity (Qty/Ah)	2x143
Charge Alternator (A)	55
Cooling Method	Water Cooled
Cooling Fan Air Flow (m3/min)	720
Coolant Capacity (engine only / with radiator) (It)	44/79.6
Air Filter	Dry Туре
Fuel Cons. Prime With %100 Load (lt/hr)	136.3
Fuel Cons. Prime With %75 Load (lt/hr)	100
Fuel Cons. Prime With %50 Load (lt/hr)	67.1
ALTERNATOR CHARACTERISTICS	
Manufacturer	Aksa
Alternator Made and Model	AK 6520
Frequency (Hz)	50
Power (kVA)	690
VOLTAGE (V)	400/231
Phase	3
A.V.R.	SX440
Voltage Regulation	(+/-)%1%
Insulation System	Н
Protection	IP22
Rated Power Factor	0.8
WEIGHT COMP. GENERATOR (Kg)	1685
COOLING AIR (m³/min)	61.1
Open Gen.Set Dimensions (mm)	
LENGTH	3558
WIDTH	1550
HEIGHT	2112
DRY WEIGHT (kg.)	5300
TANK CAPACITY (It.)	850
Gen.Set Canopy Dimensions (mm)	
LENGTH	4807
WIDTH	1606
HEIGHT	2485
TANK CAPACITY (lt.)	 850 Steel structures. Emergency stop push button. Control panel is mounted on the baseframe . Locate at the right side of the generator set. Corrosion-resistant locks and hinges.

5. Oil could be drained via valve and a hose





- 6. Exhaust system in the canopy.
- 7. Special large access doors for easy maintenance
- **8.** In front and back side special large access doors for easy maintenance

9. Base frame -fuel tank.

10. Lifting points similar to ISO container, located on each top corner of the canopy.

11. The cap on the canopy provides easy access to radiator cap.

12. Soundproofing materials

13. Plastic air intake pockets.

INTRODUCTION

AKSA POWER GENERATION

Sound-attenuated and weather-protective enclosures for generating sets from Aksa, meet event the sound requirements and provide optimum protection from inclement weather and development by our specialist acoustic engineers. Our modular designed sound insulated canopies provide ease of access for servicing and general maintenance and interchangeable components permitting on-site repair. Enclosures are designed to optimize genset cooling performance, providing you with confidence that genset ratings and ambient capability.

Control Panel

Control Module	DSE
Control Module Model	DSE 7320
Communication Ports	MODBUS
	 Menu navigation buttons Close mains button Main Status and instrumentation display Alarm LED's Close generator button

6. Status LED's

7. Operation selecting buttons

Devices

DSE 7320 Auto Mains Failure control module

Static battery charger

Emergency stop push button and fuses for control circuits

CONSTRUCTION and FINISH

Components installed in a sheet steel enclosure.

Phosphate chemical, pre-coating of steel provides corrosion resistant surface

Polyester composite powder topcoat forms a high gloss and extremely durable finish

Lockable hinged panel door provides for easy component access

INSTALLATION

Control panel is mounted to gen-set baseframe on robust steel stand or power module. Located on the side of generating set with proper panel visibility.

GENERATING SET CONTROL UNIT

The DSE 7320 control module is a standard addition to our generator sets from 220 kVA upwards and it has been designed to start and stop diesel and gas generating sets that include electronic and non-electronic engines.

The DSE 7320 includes the additional capability of being able to monitor a mains (utility) supply and is, therefore, suitable for controlling a standby generating set in conjunction with an automatic transfer switch.

The DSE7320 also indicates operational status and fault conditions, automatically shutting down the generating set and indicating faults by means of its LCD display on the front panel.

STANDARD SPECIFICATIONS

Microprocessor controlled

- 132 x 64 pixel LCD display makes information easy to read

- Front panel programming and also via PC software
- Soft touch membrane keypad and five key menu navigation
- Remote communications via RS232, RS485 and ethernet.
- Event logging (50) showing date and time
- Multiple date and time engine exercise mode and maintenance scheduler
- Engine block heater control.

- Controls; stop, manual, auto, test, start, mute lamb test/transfer to generator, transfer to mains, menu navigation.

ENGINEEngine speedOil pressureCoolant temperatureRun time Battery voltsEngine maintenance dueGENERATORVoltage (L-1, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfKVArPhase sequenceMINSVoltage (L-1, L-N)FrequencyEarth currentKWKVArPhase sequenceMINSVoltage (L-1, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KV overloadNegative phase sequenceLoss of speed signalPRE-ALARMS	Instruments
Cili pressureCoolant temperatureRun time Battery voltsEngine maintenance dueGENERATORVoltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfKVArNotage (L-L, L-N)Cutage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWKVArPfKVArPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	ENGINE
Coolant temperatureRun time Battery voltsEngine maintenance dueGENERATORVoltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfKVArKVArVoltage (L-L, L-N)Prase sequenceMAINSVoltage (L-L, L-N)FrequencyEarth currentKWPhase sequenceMAINSVoltage (L-L, L-N)FrequencyKVRNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	Engine speed
Run time Battery voltsEngine maintenance dueGENERATORVoltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfkVArKVarKOtage (L-L, L-N)Phase sequenceMAINSVoltage (L-L, L-N)FrequencyEattery under voltageFil to stopLow fuel level (opt.)KV overloadNegative phase sequenceLoss of speed signal	Oil pressure
Engine maintenance dueGENERATORVoltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfKVArKVh, kVArh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyBattery under voltageFail to stopLow fuel level (opt.)KW overloadNogative phase sequenceSequenceSattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	Coolant temperature
GENERATORVoltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfkVArKWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyKWRNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	Run time Battery volts
Voltage (L-L, L-N)Current (L1-L2-L3)FrequencyEarth currentKWPfKVArKVh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyKARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLos of speed signal	Engine maintenance due
Current (L1-L2-L3) Frequency Earth current KW Pf KVAr KVAr KVAh, kVAh, kVArh Phase sequence MAINS Voltage (L-L, L-N) Frequency WARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) KW overload Negative phase sequence Loss of speed signal	GENERATOR
FrequencyEarth currentKWPfkVArkWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	Voltage (L-L, L-N)
Earth current KW Ff KVAr KVAr KVAh, KVAh, KVArh Phase sequence MAINS Voltage (L-L, L-N) Frequency KVARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) KW overload Negative phase sequence Loss of speed signal	Current (L1-L2-L3)
kWPfkVArkWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	Frequency
PfkVArkWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)kW overloadNegative phase sequenceLoss of speed signal	Earth current
kVArkWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	kW
kWh, kVAh, kVArhPhase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)kW overloadNegative phase sequenceLoss of speed signal	Pf
Phase sequenceMAINSVoltage (L-L, L-N)FrequencyWARNINGCharge failureBattery under voltageFail to stopLow fuel level (opt.)KW overloadNegative phase sequenceLoss of speed signal	kVAr
MAINS Voltage (L-L, L-N) Frequency WARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	kWh, kVAh, kVArh
Voltage (L-L, L-N) Frequency WARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) KW overload Negative phase sequence Loss of speed signal	Phase sequence
Frequency WARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	MAINS
WARNING Charge failure Battery under voltage Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	Voltage (L-L, L-N)
Charge failure Battery under voltage Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	Frequency
Battery under voltage Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	WARNING
Fail to stop Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	Charge failure
Low fuel level (opt.) kW overload Negative phase sequence Loss of speed signal	Battery under voltage
kW overload Negative phase sequence Loss of speed signal	Fail to stop
Negative phase sequence Loss of speed signal	Low fuel level (opt.)
Loss of speed signal	kW overload
	Negative phase sequence
PRE-ALARMS	Loss of speed signal
	PRE-ALARMS

Low oil pressure

High engine temperature

Low engine temperature

Over /Under speed

Under/over generator frequency

Under/over generator voltage

ECU warning

SHUTDOWNS

Fail to start

Emergency stop

Low oil pressure

High engine temperature

Low coolant level

Over /Under speed

Under/over generator frequency

Under/over generator voltage

Oil pressure sensor open

Phase rotation

ELECTRICAL TRIP

Earth fault

kW overload

Generator over current

Negative phase sequence

Options

High oil temperature shut down

Low fuel level shut down

Low fuel level alarm High fuel level alarm

0

EXPANSION MODULES Additional LED module (2548)

Expansion relay module (2157)

Expansion input module (2130)

Standards

 
Elecrical Safety / EMC compatibility

BS EN 60950 Electrical business equipment

BS EN 61000-6-2 EMC immunity standard

BS EN 61000-6-4 EMC emission standard

STATIC BATTERY CHARGER



Battery charger models' output V-I characteristic is very close to square

2405 has fully output short circuit protection and it can be used as a current source.

2405 charger has high efficiency, long life, low failure rate, lightweight and low heat radiated in accordance with linear alternatives.

The charger is fitted with a protection diode across the output.

Charge fail output is available.

Connect charge fail relay coil between the positive output and CF output.

Input: 196-264V.

AKSA POWER GENERATION

Output: 27,6V 5A or 13,8V 5A.

STANDARD SPECIFICATIONS

- Water cooled, Diesel engine
- Radiator with mechanical fan
- Protective grille for rotating and hot parts
- Electric starter and charge alternator
- Starting battery (with lead acid) including rack and cables
- Engine coolant heater
- Base frame design incorporates an integral fuel tank and anti-vibration isolators
- Flexible fuel connection hoses
- Single bearing, class H alternator
- Industrial exhaust silencer and steel bellows supplied separately(for open sets)
- Static battery charger

- Manual for application and installation

OPTIONAL EQUIPMENTS

ENGINE
Fuel-Water Seperator Filter
Oil heater
ALTERNATOR
Anti-Condensation Heater
Over sized alternator
PMG excitation + AVR
Main line circuit breaker
CONTROL SYSTEM
Automatic synchronising and power control system (multi gen-set Parallel)
Transition synchronization with mains
Remote annunciator panel
Remote relay output
Alarm output relays
Remote communication with modem

.



Earth fault, single set
Charge Ammeter
TRANSFER SWITCH
Three Pole Contactor
Four Pole Contactor
Three or four pole motor operated circuit breaker
OTHER ACCESSORIES
Main Fuel Tank
Automatic or manual fuel filling system
Manual oil drain pump
Electrical oil drain pump
Low and high fuel level alarm
Residential silencer
Enclosure: weater protective or sound attenuated
Duct adapter (on radiator)
Inlet and outlet motorised louvers
Inlet and outlet acoustic baffles
Trailer
Tool kit for maintenance
Automatic transfer switch
AKSA CERTIFICATES

- TS ISO 8528
- CE
- SZUTEST
- 2000/14/EC